

## Straw Printer SPM-1



### Specifications

Power consumption	: 300W
Applicable straws	: 0.5ml straws
Printing capacity	: Maximum up to 40straws/min. adjustable.
Dimensions	: Approx. 30 x 30 x 34cm
Weight	: Approx. 20kg
Accessories	: Straws for initial operation 100pcs
	Print type case 1pc
	L-shape hexagonal wrench set 1set
	Screw driver (L) 1pc
	Small screw driver set 1set
	Spare screw 2pcs
	Wrench, both side 1pc
	AC power code 1pc
	Accessory case 1pc
	Straw receiver 1pc

**FHK** Fujihira Industry Co., Ltd.

6-11-6 Hongo Bunkyo-ku Tokyo 113-0033 Japan


Tel: +81-3-3812-2270 Fax: +81-3-3812-3663

E-mail : [overseas<sup>1</sup>@fujihira.co.jp](mailto:overseas1@fujihira.co.jp)

Preparation for print :

**<How to set print type>**

1. Hold and loosen the positioning knob for print type case
2. Slowly pull down the print type case in 90degrees.

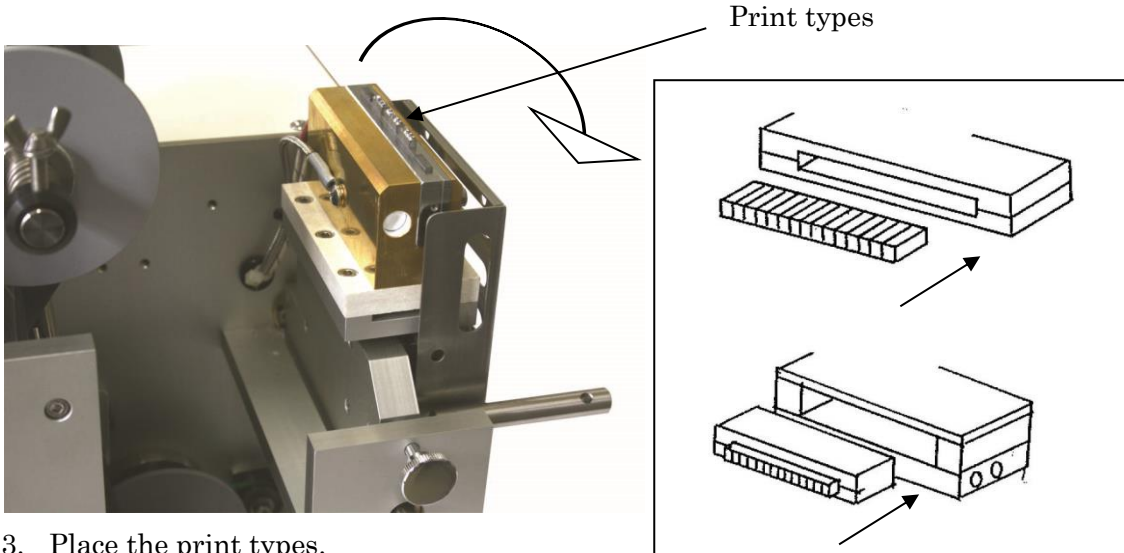

3. Place the print types.
4. When the print types are new, use the enclosed grind stone slightly for one stroke to make the surface of types smooth for printing.
5. Hold the positioning knob and return it in vertical position.

**<How to adjust the speed>**

Speed controller :

- 50 → Filling speed 18 - 20pcs/min.
- 100 → Filling speed 38 - 40pcs/min.

